


Camera Not Open When Clicked/ Google Meets Says Camera not Found

Here are the steps to get your Camera back in working order if it does not respond to being clicked or is not detected by Google Meets:

1. With your Chromebook turned on press “esc” and “refresh” and the “Power” button on the right hand side of the Chromebook at the same time.

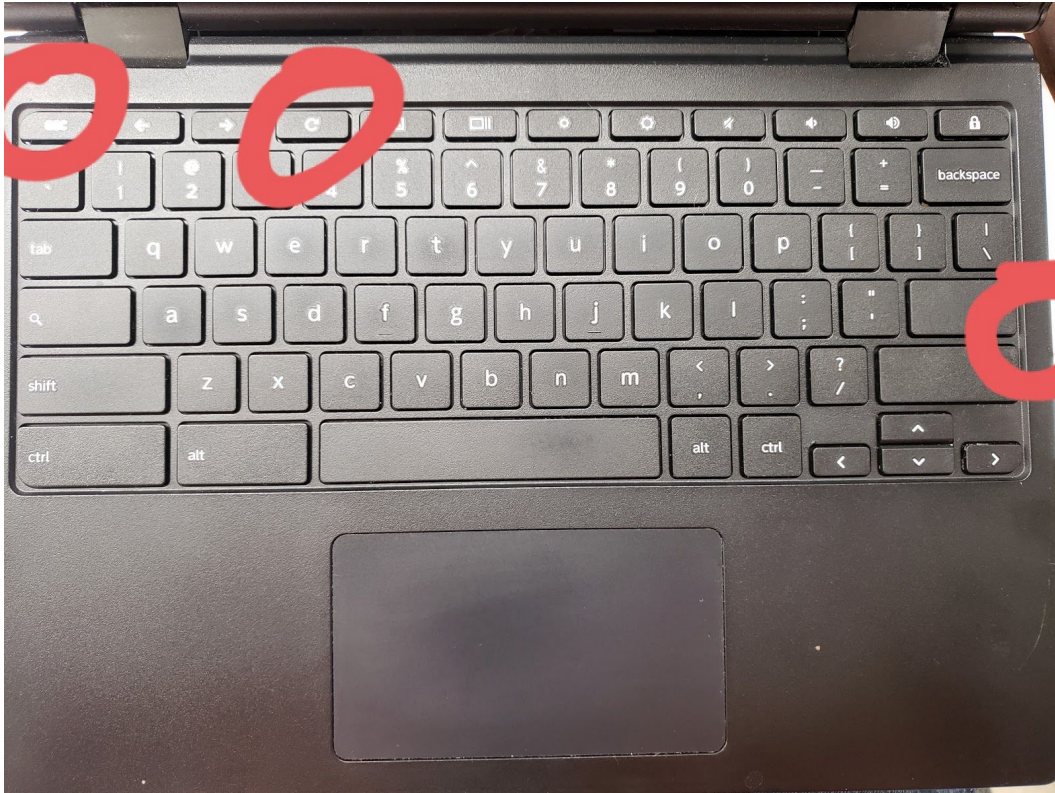

2. Wait for a large exclamation mark to appear on the screen then Press “ctrl” and “d” at the same time.
3. A new message will appear and ask you to press “enter”. Press “enter”.
4. After the previous step another screen will appear and ask you to press the “space bar”. Press the “space bar”
5. Another screen will appear and ask you to press “enter”. Press “enter”.
6. It will go through a reboot process and ask you to connect to the internet. If you are at school click on CSD4 and enter the password “**culverbulldog**”. If you are at home, locate your internet and enter your own password.
7. It will take a minute to fire up while it provisions but then you should be good to go!!
8. If there is any further issue please see the website for technical support contact information.